

Precision Fit Holders

The Universal Holder and Modified Holder will both accept all available marker plates.

To install plates to the holder body: remove the thumb screw and position the plate between the guide bearings, keeping the single bearing to your left. The flat edge (the resting surface) of the holder, and the cut-out on the plate, should be at the top.

Reinstall the thumb screw and tighten just enough so the plate slides easily back and forth.

The single guide bearing to the left is seated in a slotted cut-out and can be adjusted to keep the plate true.

The resting surface has rough non-slip tape to prevent the holder from moving when it is used on a smooth frame surface.