


Panic and Trim Installation Jig

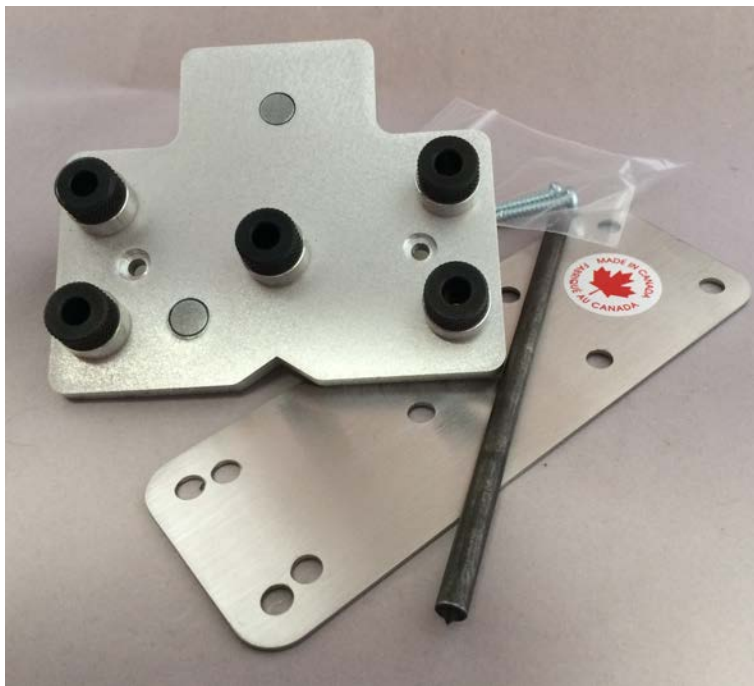

No measuring....
No calculations....
No paper templates!

Installing a Von Duprin 22 panic bar and outside TP trim is fast and accurate using this drill jig and tracer guide.

\$146.45

www.doorgadgets.com

Includes magnetic aluminum jig plate, stainless steel tracer guide, transfer punch and 2 sheet metal screws.