

Panic Hammock

A simple, hands-free device to support a panic bar during installation or repair.

1. Fit the large open blocks over the top of the door, allowing the cords to hang down toward the panic bar.
2. Place the small, stainless steel “s” hook into one of the screw holes used for securing the cover on the active case. (Photo 1A and B)
3. Adjust to the appropriate height using one hand and lock into place with the Toggle Lock. (Photo 3)
4. Before installing the hinge-side mounting plate, slip the small slotted block over the metal edge of the panic bar on the hinge side. This will hold the bar while you are securing the active case to the outside trim. (Photo 2)
5. Adjust the Toggle Locks to level the bar. (Photo 3)



Photo 1A



Photo 2

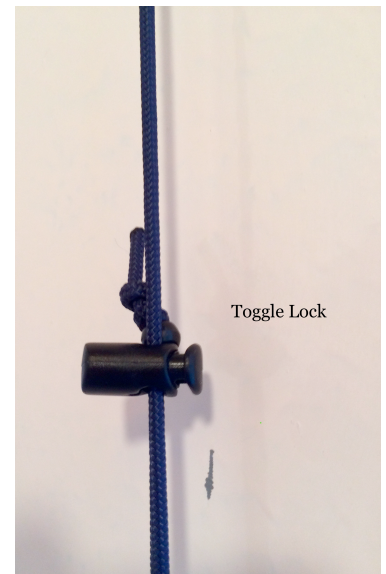


Photo 3



Photo 1B